

# Lock Core Installation



Insert key into lock plug



Push key all the way in, until the last pin shifts upward (A).




It may be necessary to manually push the last pin upwards while fully inserting the key (B).




Once the lock core is in place remove the key.

# Lock Core Installation Guide

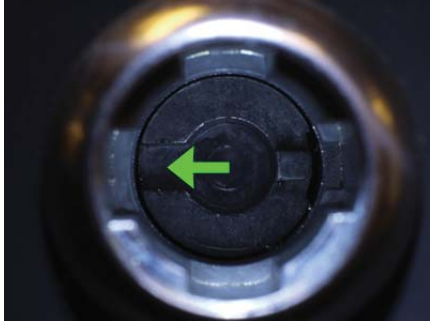

The lock core notch-out must be aligned to the left (unlocked position) for proper lock core installation.

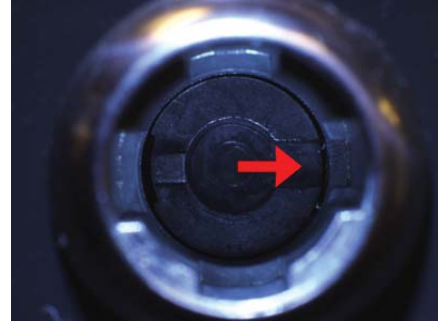

If lock core notch-out is aligned to the right (locked position) or anywhere in between, then the lock core will not install properly.



The lock core is properly installed when the lock core number is on top, and the lock core is flush with the lock core housing.



Improper lock core installation is noticeable as the lock core will not be flush with the lock core housing.