


INSIDE VIEW

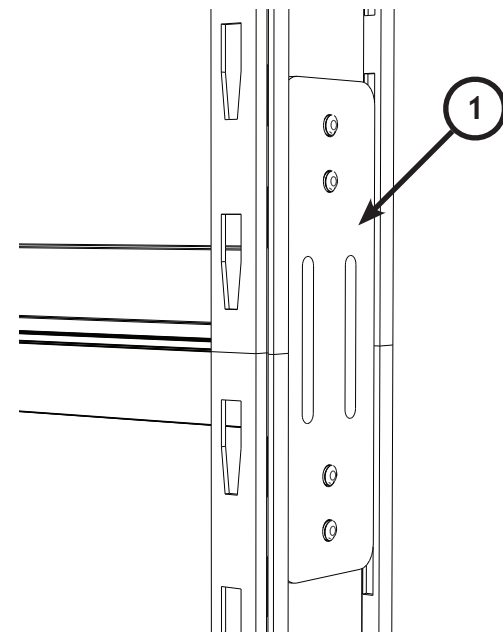

OUTSIDE VIEW

PARTS:

1. X3 ADD-ON BRACKET (FIG: 5.10)
2. M6 x 6mm SOCKET SCREW (FIG: 5.01)

WARNING:

- ADD-ON FRAMES MUST BE INSTALLED PRIOR TO CONNECTING THE PANELS TO ANY OTHER COMPONENTS
- DO NOT INSTALL GLAO TILE UNTIL AFTER THE BOTTOM TILE IS INSTALLED